

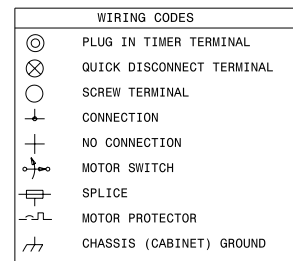
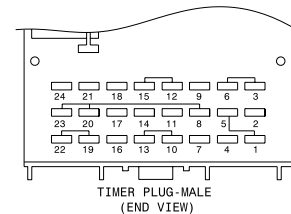
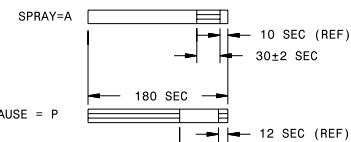
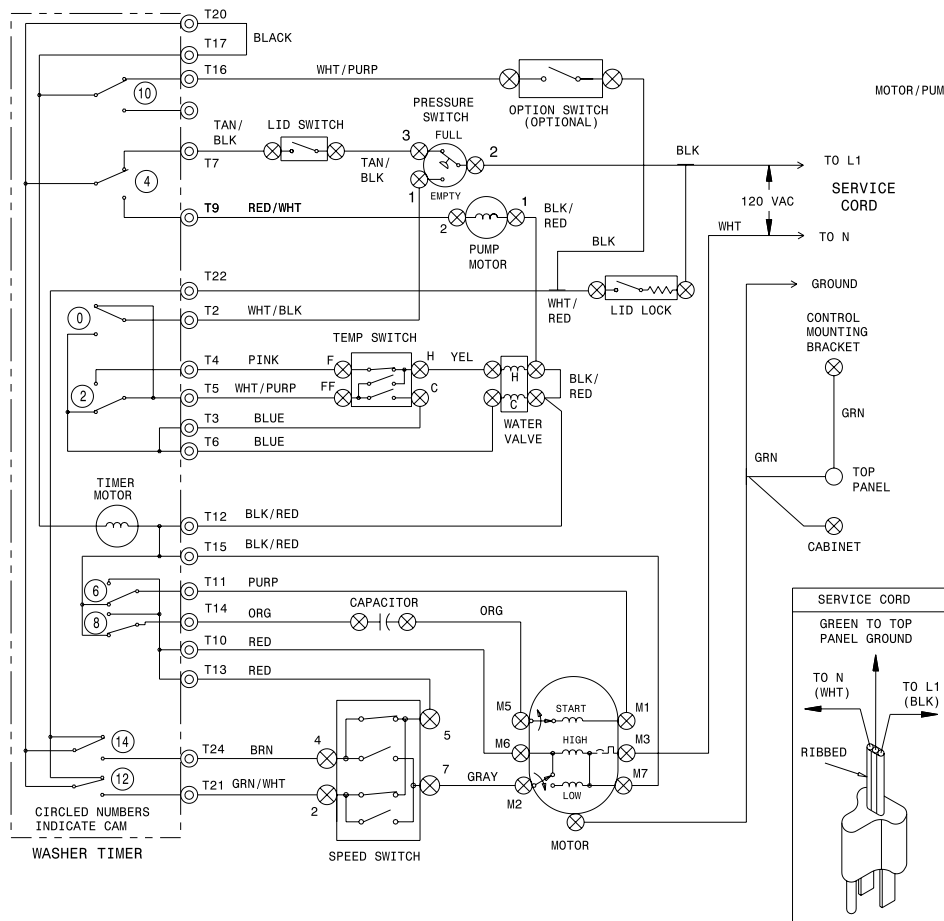


CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

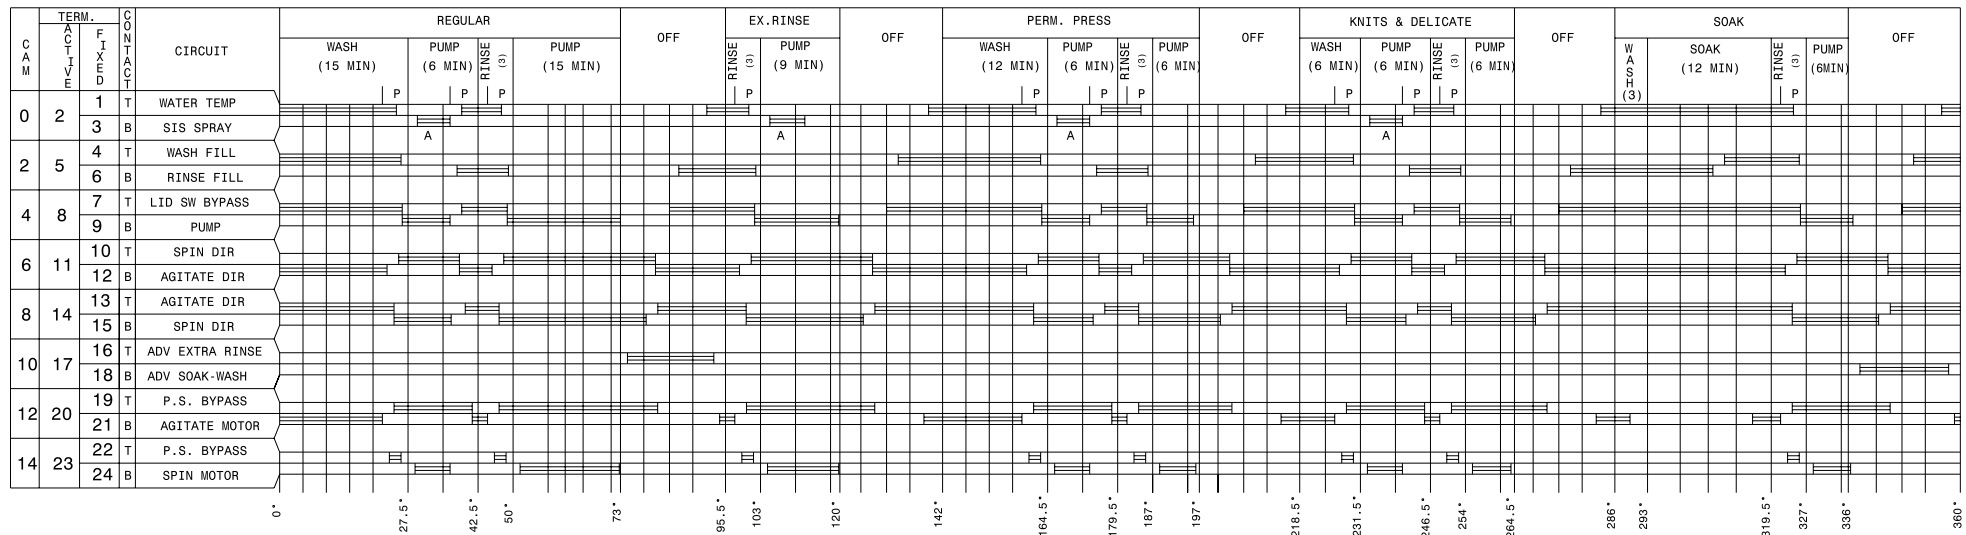

TEMPERATURE SWITCH CIRCUIT			
WASH/RINSE	F-H	FF-H	FF-C
COLD/COLD			X
WARM/COLD	X		X
HOT/COLD	X		
WARM/WARM (OPT)		X	X

X=CONTACTS CLOSED



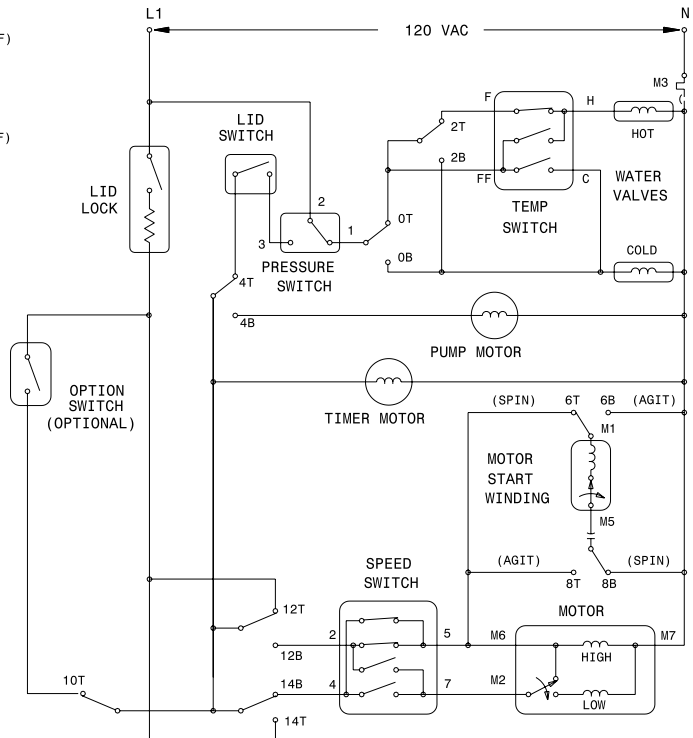


SPEED SWITCH CIRCUIT			
AGIT/SPIN	2-5	2-7	4-5
N/N	X		X
N/S	X		X
S/N (OPT)		X	X
S/S		X	X

N=NORMAL
S=SLOW
X=CONTACTS CLOSED

WIRING DIAGRAM
134322400

PRECAUCION: DESCONECTAR LA CORRIENTE ELECTRICA ANTES DE DAR SERVICIO A LA SECADORA.

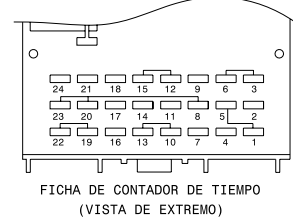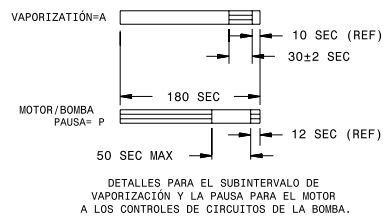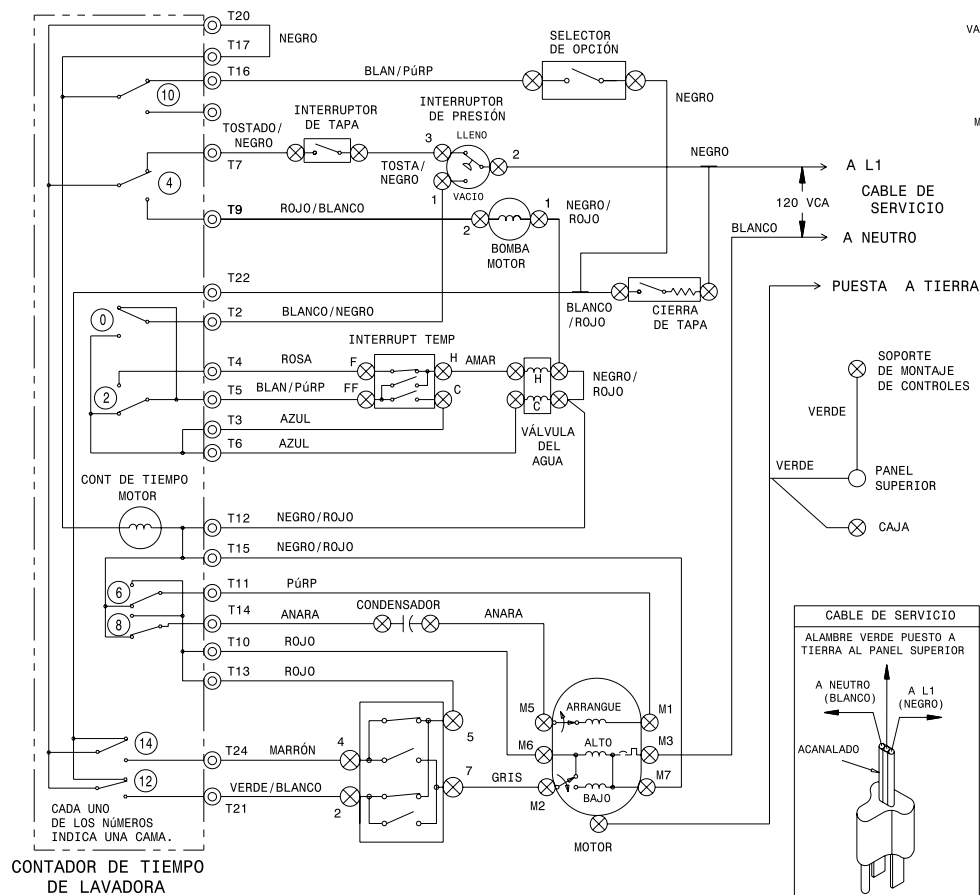
[illegible]

CODIGOS DE ALAMBRADOS	
	TERMINAL ENCHUFADE DE CONTADOR DE TIEMPO
	TERMINAL DE DESCONEXIÓN RAPIDA
	BORNE DE TORNILLO
	CONEXIÓN
	SIN CONEXIÓN
	INTERRUPTOR DEL MOTOR
	EMPALME
	PROTECTOR DE MOTOR
	PUESTA A TIERRA DEL CHASIS (GABINETE)

INTERRUPTOR TEMPERATURA			
LAVADO/ ENJUAGUE	CIRCUITO		
	F-H	FF-H	FF-C
F/F			X
T/F	X		X
C/F	X		
T/T (OPC)		X	X

INTERRUPTOR DE VELOCIDAD				
AGITAC/CENTRIF	2-5	2-7	4-7	4-5
N/N	X			X
N/L	X		X	
L/N (OPT)		X		X
L/L		X	X	

N=NORMAL L=LENTO X=CERRADOS

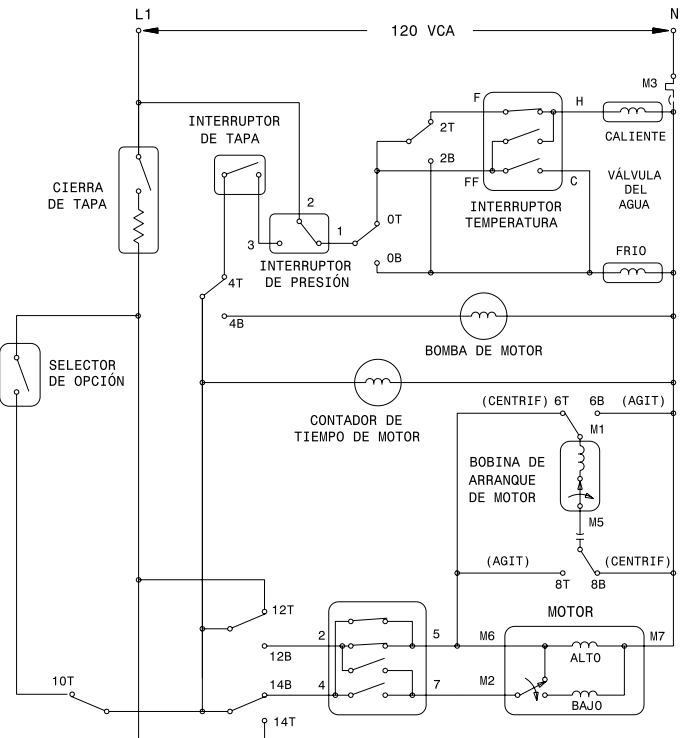

NOTA:
LOS SUFIJOS INDICAN LOS CONTACTOS DEL
INTERRUPTOR DE CONTADOR DE TIEMPO.
T= SUPERIOR
B= INFERIOR

DIAGRAMA DE CONEXIONES
NO DE PIEZA 134322400