


Installation Instructions

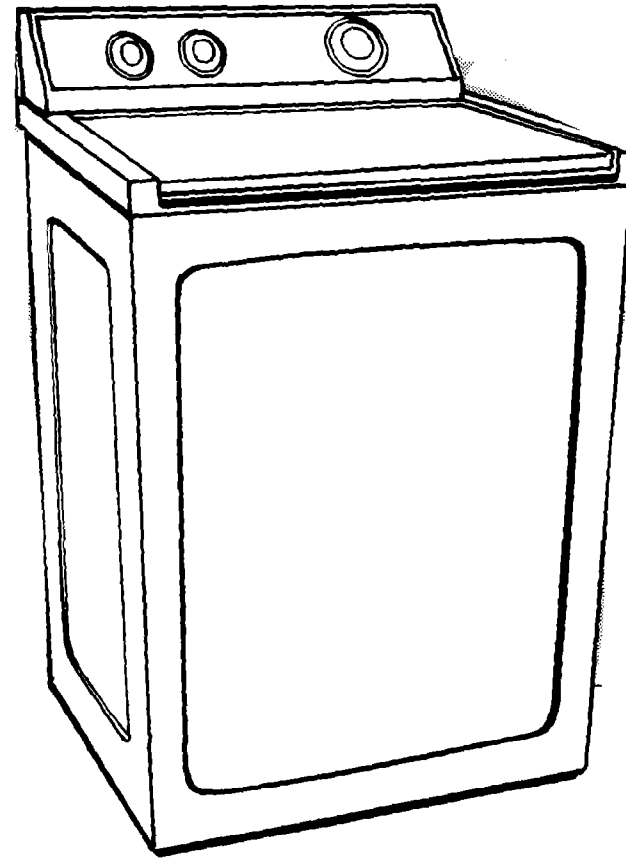

Part No. 3429270 Rev. C

IMPORTANT:
Read and save
these instructions.

IMPORTANT:

Installer: Leave Installation Instructions
with the homeowner.

Homeowner: Keep Installation Instructions
for future reference.

Save Installation Instructions for local
electrical inspector's use.

Washer

Before you start...

Check location where washer will be installed. Proper installation is your responsibility. Make sure you have everything necessary for proper installation.

Grounded electrical outlet is required. See Electrical requirements.

Standpipe drain system: Needs a two-inch minimum diameter standpipe with minimum carry-away capacity of 11 gallons per minute. Top of standpipe must be at least 34 inches high and no higher than 72 inches from bottom of washer.

Floor drain system requires a siphon break, Part No. 285320.

Untape and open washer lid. Remove packages and hoses from washer.

Hot and cold water faucets: Must be within 4 feet of back of washer and provide water pressure 5-100 PSI.

Laundry tub drain system: Needs a 20-gallon laundry tub. Top of tub must be at least 34 inches high and no higher than 72 inches from bottom of washer.

If a longer drain hose is needed, drain hose (Part No. 388423) and hose extension kit (Part No. 285442) are available from authorized parts distributors. If drain hose must be shortened, use kit (Part No. 285442).

Important: Observe all governing codes and ordinances.

Water heater: Set to deliver 140°F water to washer.

Level floor: Maximum slope under entire washer — 1 inch.

NOTE: If casters are installed, then maximum slope is 3/8 inch.


SEE RECESSED AREA INSTRUCTIONS ON BACK COVER.

Support: Floor must be sturdy enough to support washer, water and wash load weight of 260 pounds.


CAUTION

Product Damage
Do Not store or operate washer below 32°F (some water may remain in washer).
See Use & Care Guide for "Winterizing" Information.
Failure to follow above may result in product damage.


Tools needed for installation:

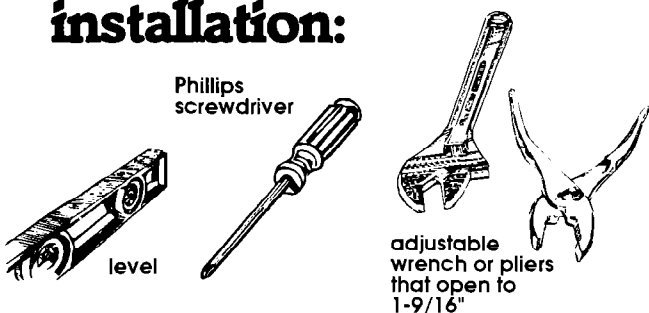

Parts supplied for installation:

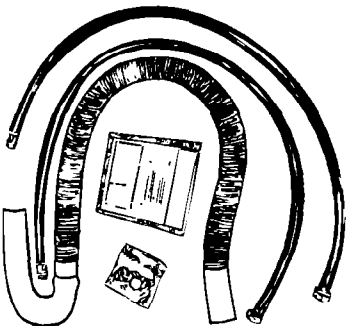

Remove parts from packages. Check that all parts were included.

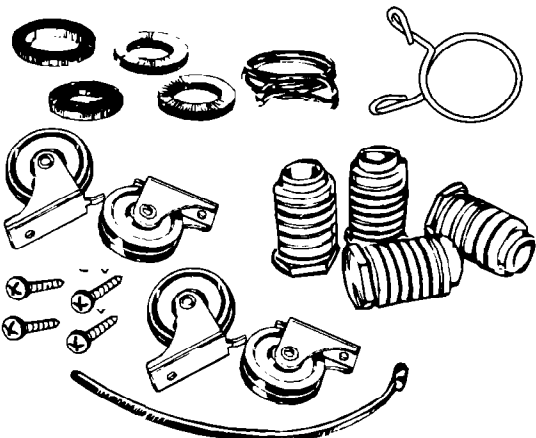

1 small clamp
1 drain hose
1 hose clamp
2 inlet hoses
4 flat water hose washers

4 casters
4 legs
literature
package
4 screws
1 plastic strap

Panel A

Electrical requirements

WARNING

Electrical Shock Hazard

- **Electrical ground is required on this appliance.**
- If cold water pipe is interrupted by plastic, non-metallic gaskets or other insulating materials, Do Not use for grounding.
- Do Not ground to gas pipe.
- Do Not modify the power supply cord plug. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.
- Do Not have a fuse in the neutral or grounding circuit. A fuse in the neutral or grounding circuit could result in an electrical shock.
- Do Not use an extension cord with this appliance.
- Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.

Failure to follow these instructions could result in serious injury or death.

If codes permit and a separate grounding wire is used, it is recommended that a qualified electrician determine that the grounding path is adequate.

120-volt, 60-Hz, AC-only, 15- or 20-ampere fused electrical supply is required. (Time-delay fuse or circuit breaker is recommended.) It is recommended that a separate circuit serving only this appliance be provided.

Recommended grounding method

For your personal safety, this appliance must be grounded. This appliance is equipped with a power supply cord having a 3-prong grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating 3-prong grounding-type wall receptacle, grounded in accordance with National Electrical Code, ANSI-NFPA 70—latest edition and all local codes and ordinances. See Figure 1. If a mating wall receptacle is not available, it is the personal responsibility and obligation of the customer to have a properly grounded 3-prong wall receptacle installed by a qualified electrician.

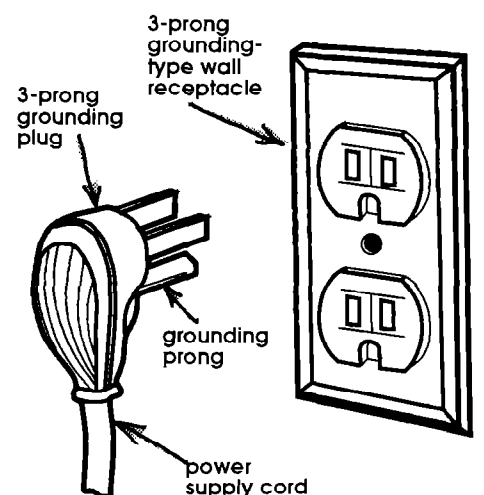


Figure 1

With washer in laundry area.

- 1.** If you wish to install the casters so washer is portable, go to Step 2.


If you wish to install the leveling legs, see Panel C, "Permanent Installation," for detailed instructions and start with Step 1a.

- 2.** Place two corner posts from the carton on the floor in back of the washer.


Product/Property Damage

- Tape lid closed.
- Grasp washer body, not the console or lid, when placing washer on its back.
- Place washer on corner posts from carton.

Failure to follow these instructions may result in product or property damage.

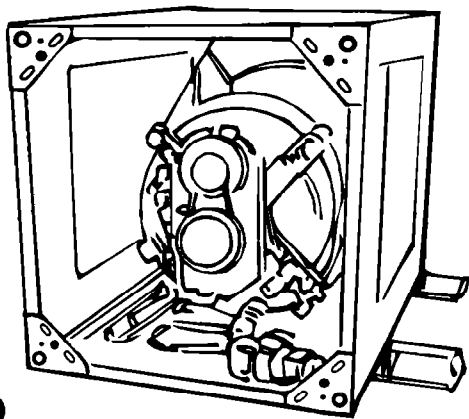

- 3.** Firmly grasp the body of the washer and gently lay it on its back on the corner posts. Remove shipping pieces.

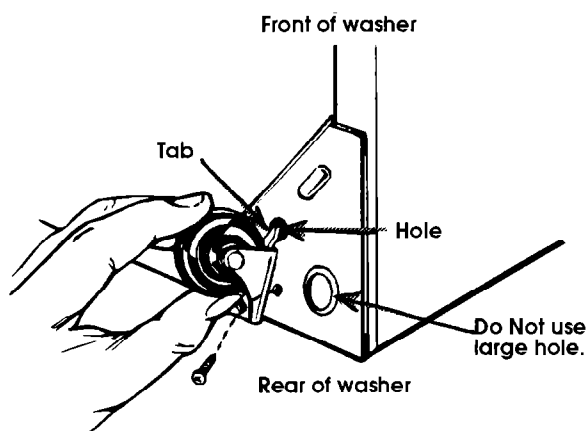

- 4.** Insert tab of one caster into hole located near the center of the lower right corner of the washer bottom. Use a screw to attach other end of caster so that wheel faces front of washer cabinet. Do Not use large hole.

Attach other casters in the same way — with wheels facing the front of the washer cabinet. **If all caster wheels do not face the front of the washer cabinet, the washer will not move easily and may vibrate during use.**

- 10.



Numbers correspond to steps.

NOTE: All caster wheels must face front of cabinet.


Product/Property Damage

Tightly grasp washer body, not the console or lid, when standing washer upright. Washer will roll easily on casters.


Failure to follow this instruction may result in product or property damage.

- 5.** Firmly grasp body of washer and stand washer upright.

Use new hoses and washers that came with your washer.

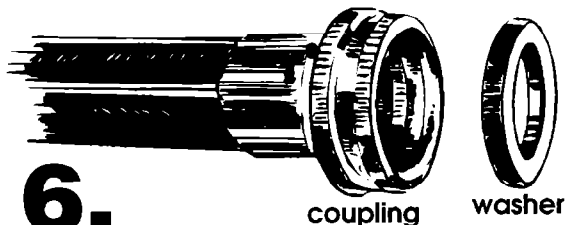


- 6.**  **coupling** **washer**
- Insert a flat washer into **each** end of the inlet hoses. Check that washers are firmly seated in couplings.

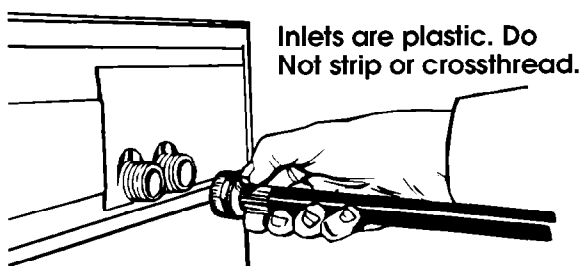


- 7.** Attach an inlet hose to each inlet valve opening. Tighten couplings by hand; then use pliers to make an additional two-thirds turn.


- 8.** Place hose clamp over washer drain connector. Push coupling end of drain hose onto washer connector. Use pliers to open clamp and slide clamp over drain hose. Check for good fit.

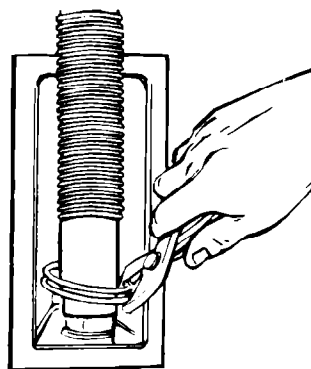


- 9.** Open clamp and slide over “hook” end of drain hose to secure the ridge and corrugated sections together.

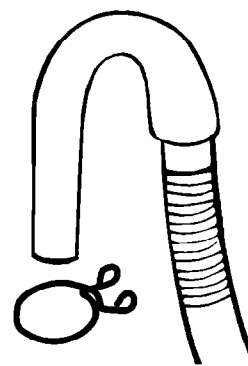

- 10.** Move washer close to its final location. Put "hook" end of drain hose into laundry tub or standpipe. Check for proper length of drain hose.

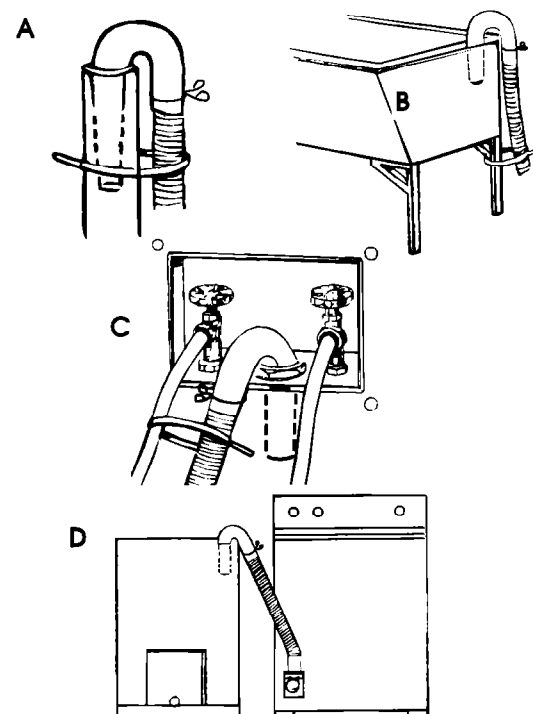

If a longer drain hose is needed, drain hose (Part No. 388423) and hose extension kit (Part No. 285442) are available from authorized parts distributors. If drain hose must be shortened, use hose kit (Part No. 285442).

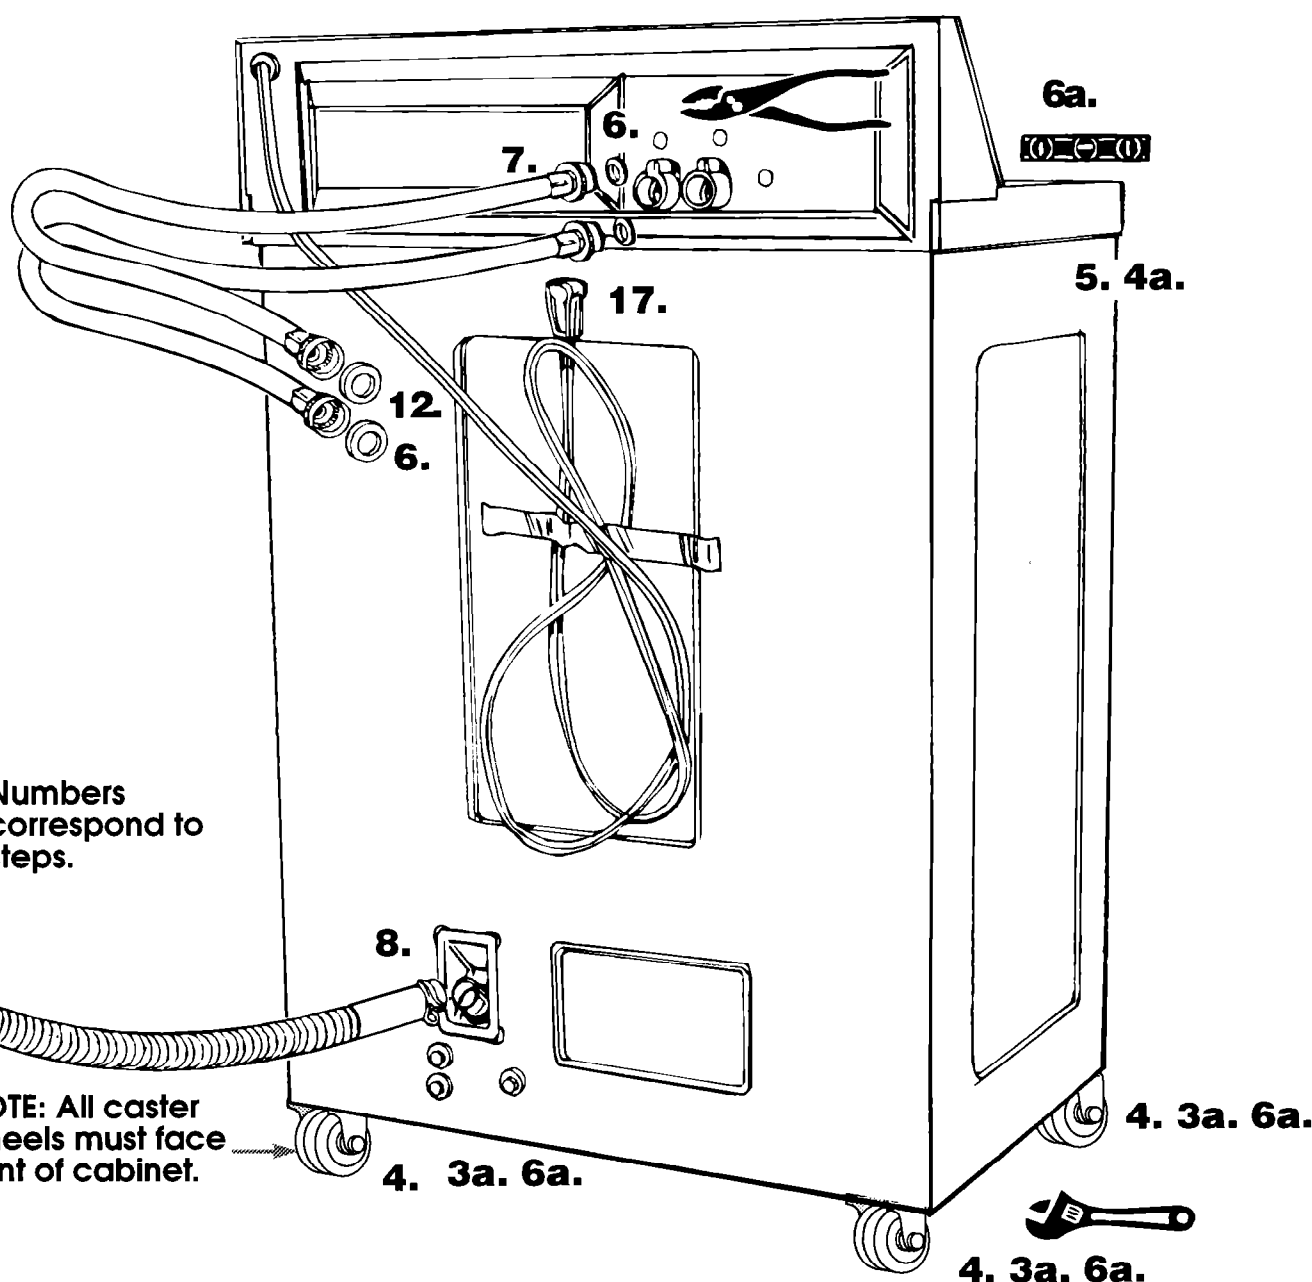




11. Before attaching water inlet hose, run water through both faucets into a bucket. This will get rid of particles in the water lines that might clog hoses. Mark which is the hot water faucet.

12. Attach inlet hose (inlet marked "H") to hot water faucet. Attach the other hose (inlet marked "C") to cold water faucet. Tighten coupling to faucet by hand; then use pliers to make final two-third turn.

If you have installed feet for a permanent installation, go to "Permanent Installation", Step 5A, on this panel.

13. Move washer to its operating location.

14. CHECK ELECTRICAL REQUIREMENTS. BE SURE YOU HAVE CORRECT ELECTRICAL SUPPLY AND RECOMMENDED GROUNDING METHOD.

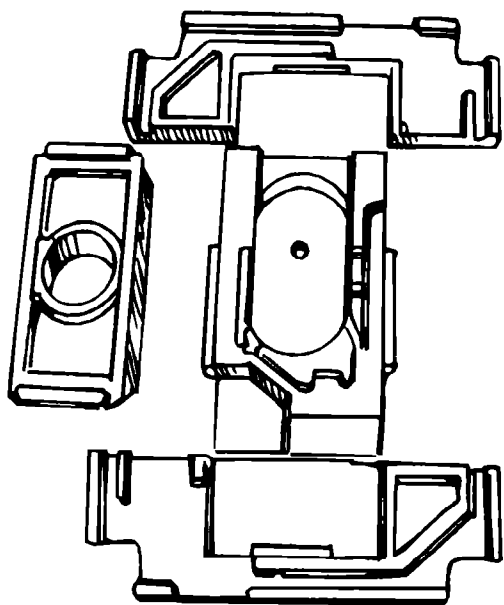

15. Check that you have:

- all the tools you started with.
- removed all shipping materials.
- installed all parts listed on Panel A.

16. Turn on water faucets and check for leaks. Tighten couplings if there is leaking. DO NOT OVERTIGHTEN, this could cause damage to faucet.

17. Untape electrical cord and plug into grounded outlet.

18. Take a few minutes and read the Use and Care Guide to fully understand your new washer. Now start the washer and allow it to complete the regular cycle.

To get the most efficient use from your new washer, read your Use and Care Guide. Keep Installation Instructions close to washer for easy reference.

Permanent Installation


1a. Place two corner posts from the carton on the floor in back of the washer.

CAUTION

Product/Property Damage


- Tape lid closed.
- Grasp washer body, not the console or lid, when placing washer on its back.
- Place washer on corner posts from carton.

Failure to follow these instructions may result in product or property damage.

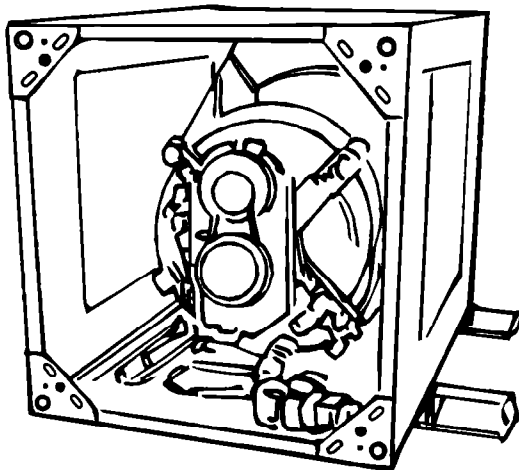

2a. Firmly grasp the body of the washer and gently lay it on its back on the corner posts. Remove shipping pieces.

3a. With one of the legs in hand, check the ridges for a diamond marking. That is how far the legs are supposed to go into the hole. Start to screw the legs into the holes by hand. A little liquid detergent to lubricate the legs will help.

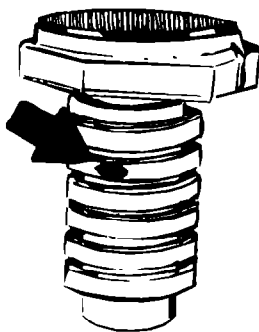

Use a wrench to finish turning the legs until you reach the diamond marks.

CAUTION

Floor Damage


- Tightly grasp washer body, not the console or lid, when standing washer upright.
- Slide washer onto cardboard or hardboard before moving washer across floor.

Failure to follow these instructions may result in product or property damage.


4a. Place cardboard or hardboard in front of washer. Firmly grasp body of washer and stand washer upright.

Go to Step 6, Panel B, and complete Steps 6-12.

5a. Move washer to its final location. Remove cardboard or hardboard from under washer.

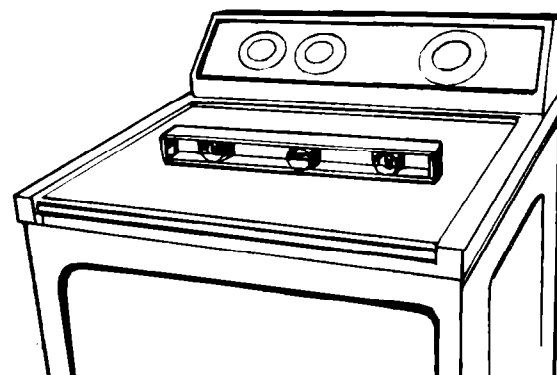

6a. Check levelness of washer by placing a carpenter's level on top of the washer, first side to side; then front to back.

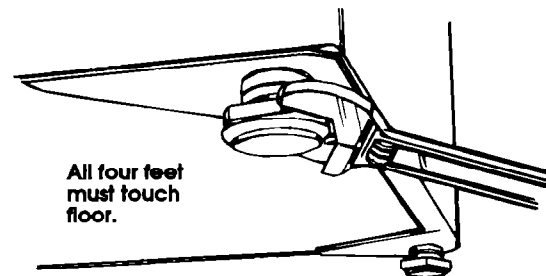

If washer is not level, adjust the legs up or down. Make final check with level. All four feet must touch the floor so that washer is stable.

Note: If washer is moved to adjust drain hose, the washer must be leveled again.

Go to Step 14 and complete Steps 14-18.

Recessed area instructions

This washer may be installed in a recessed area or closet.

The installation spacing is in inches and is minimum allowable.

Additional spacing should be considered for ease of installation and servicing.


If closet door is installed, the minimum air openings in top and bottom are required. Louvered doors with air openings in top and bottom are acceptable.

Companion appliance spacing should be considered.

If you need assistance...

Check your Use and Care Guide for a toll-free number to call or call the dealer from whom you purchased this appliance. The dealer is listed in the Yellow Pages of your phone directory under "Appliances - Major".

When you call, you will need the washer model number and serial number. Both numbers can be found on the serial/rating plate located under the washer lid and on the top of the washer.

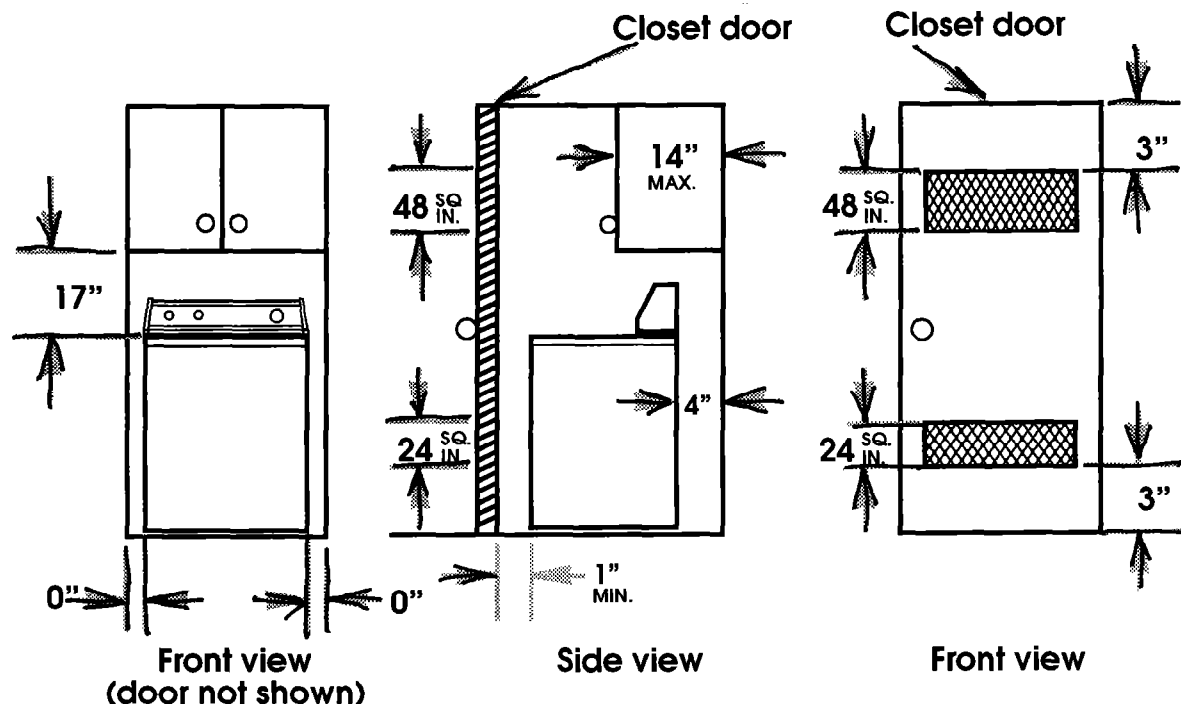

Minimum installation spacing

* Note: If a compact dryer is mounted above a washer in a stack stand or wall mount kit, there must be at least 43 inches in front of the washer. Then washer can be moved away from wall or rear of stack stand kit to completely open washer lid.

