



OVEN CIRCUIT//CIRCUITO DE HORNO//CIRCUIT FOUR

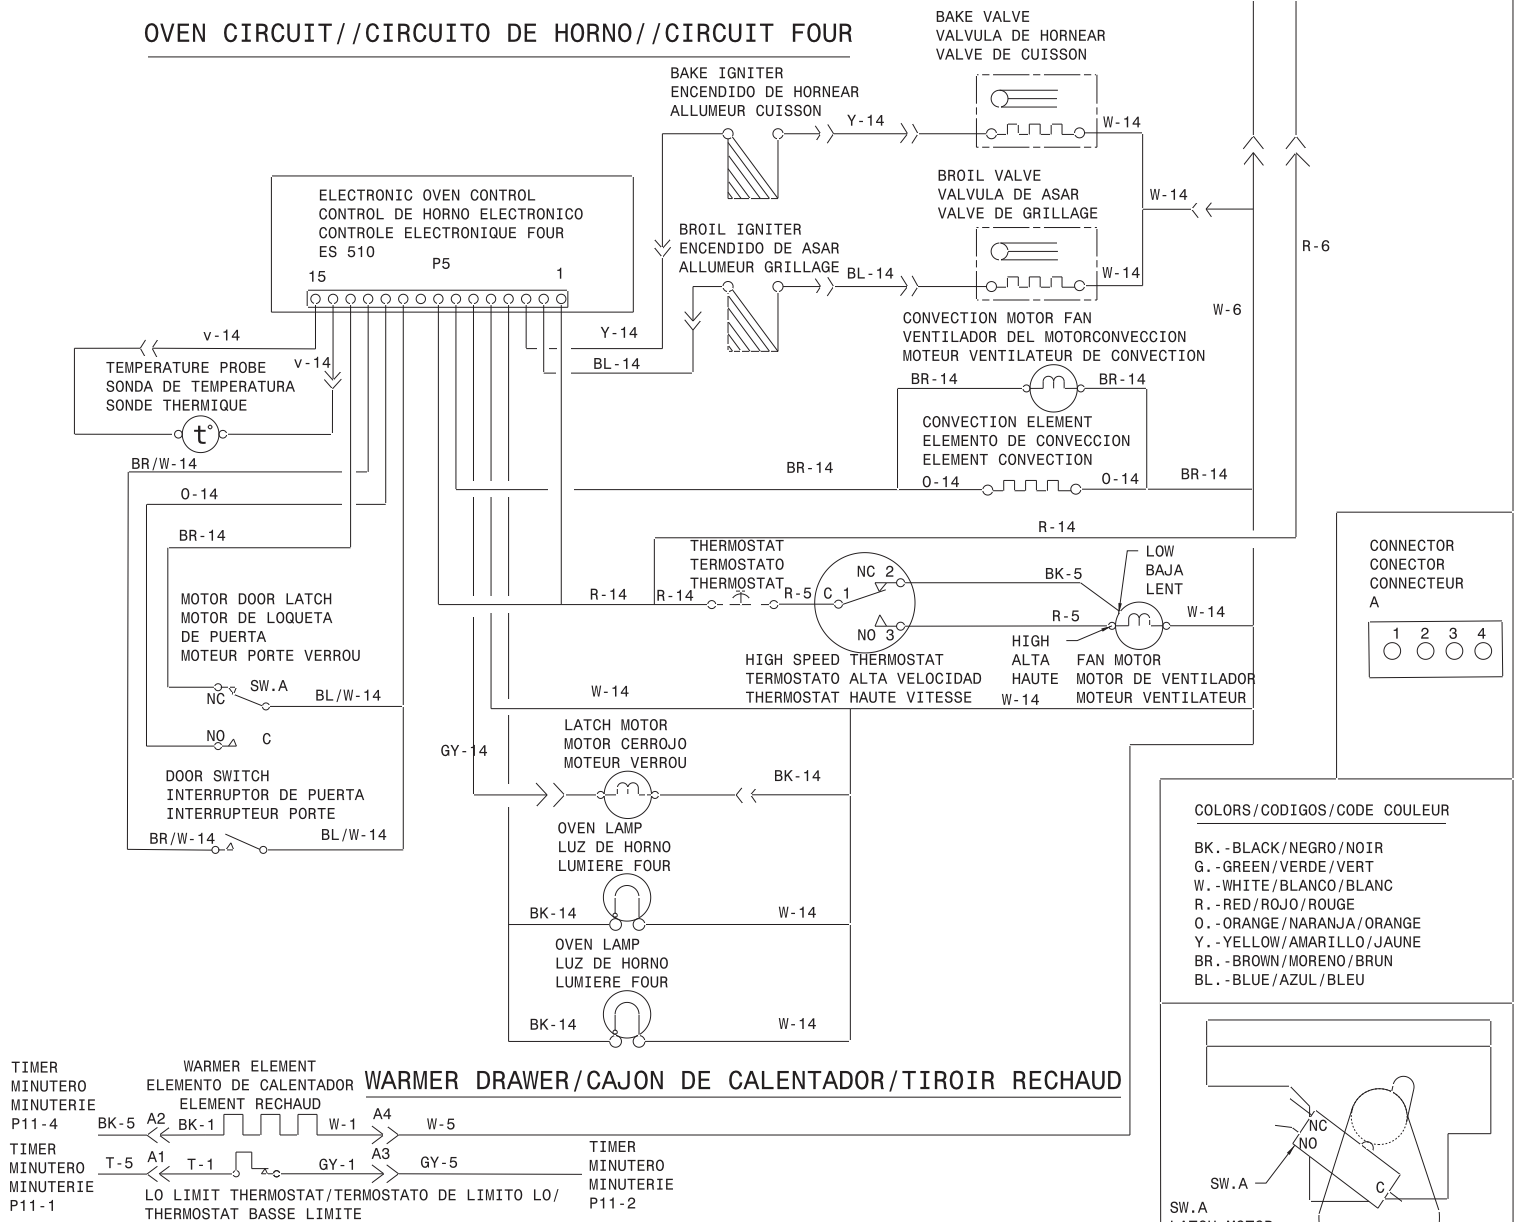

COOKTOP CIRCUIT / CIRCUITO DE PLANCHA DE COCINAR / CIRCUIT TABLE CUISSON

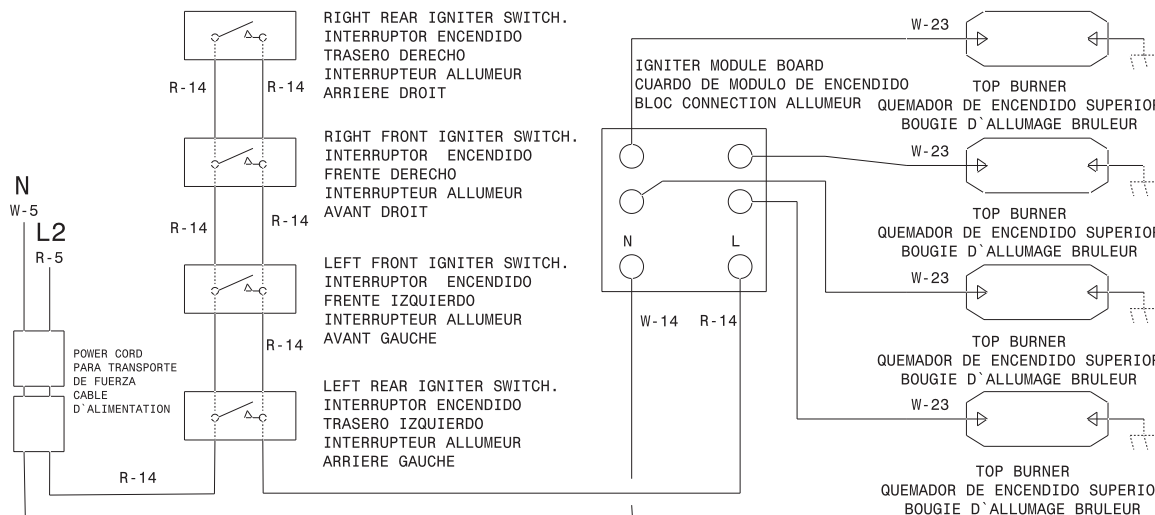

CODE	GAUGE	TEMP.°C	CSA	UL
CODIGO	MEDIDA			
1	CALIBRE			
2	18	125	CL1251	3173
3	16	125	CL1251	3173
4	14	125	CL1251	3173
5	12	125	CL1251	3173
6	18	150	EXL-150	3321
7	16	150	EXL-150	3321
8	14	150	EXL-150	3321
9	12	150	EXL-150	3321
10	18	200	SEW-1	3122
11	16	200	SEW-1	3122
12	12	250		3252
13	16	250		3252
14	20	150	EXL-150	3321
15	8	150	EXL-150	3321
16	8	60		
17	10	60		
18	10	200	SEW-1	3122
19	20	125	CL1251	3173
20	20	200	SEW-1	3122
21	22	125	CL-1251	3173
22	22	150	EXL-150	3321
23	18	200		3573

CAUTION: DISCONNECT CURRENT BEFORE REMOVING REAR COVER.
ATENCIÓN: CORTAR EL CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.
ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.

318271923 REV:A