

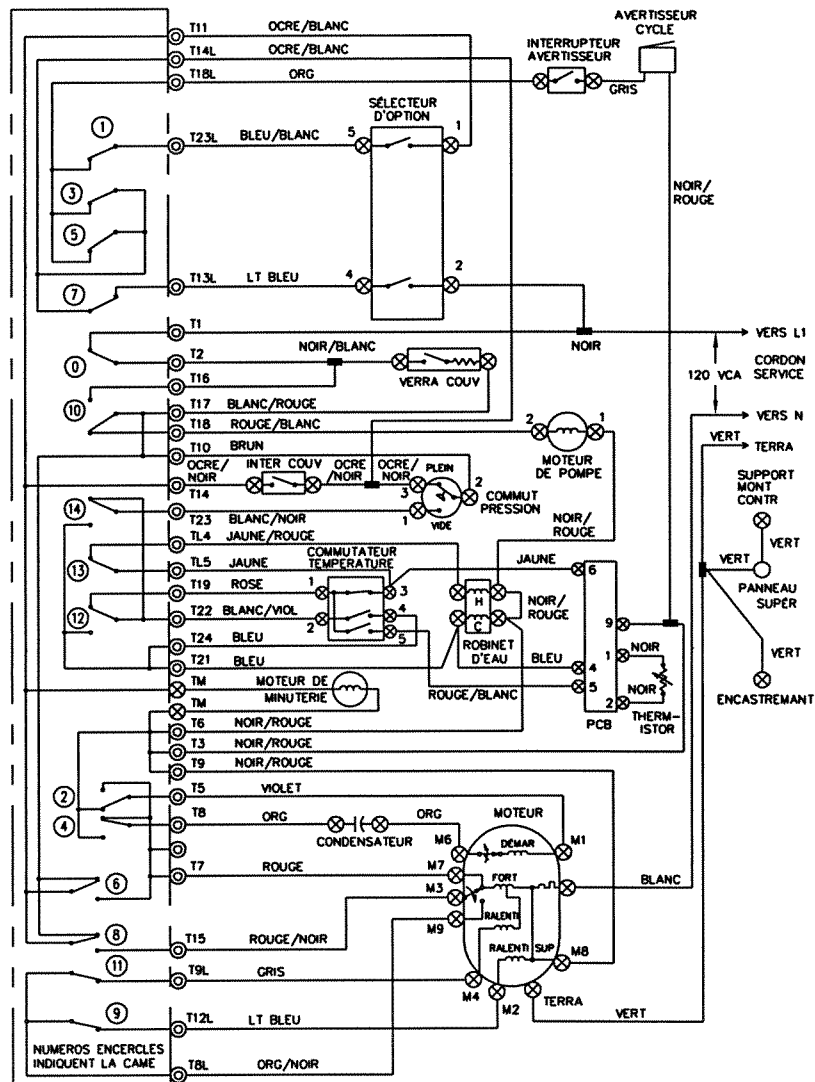



MISE EN GARDE: METTRE HORS
TENSION AVANT D'EFFECTUER

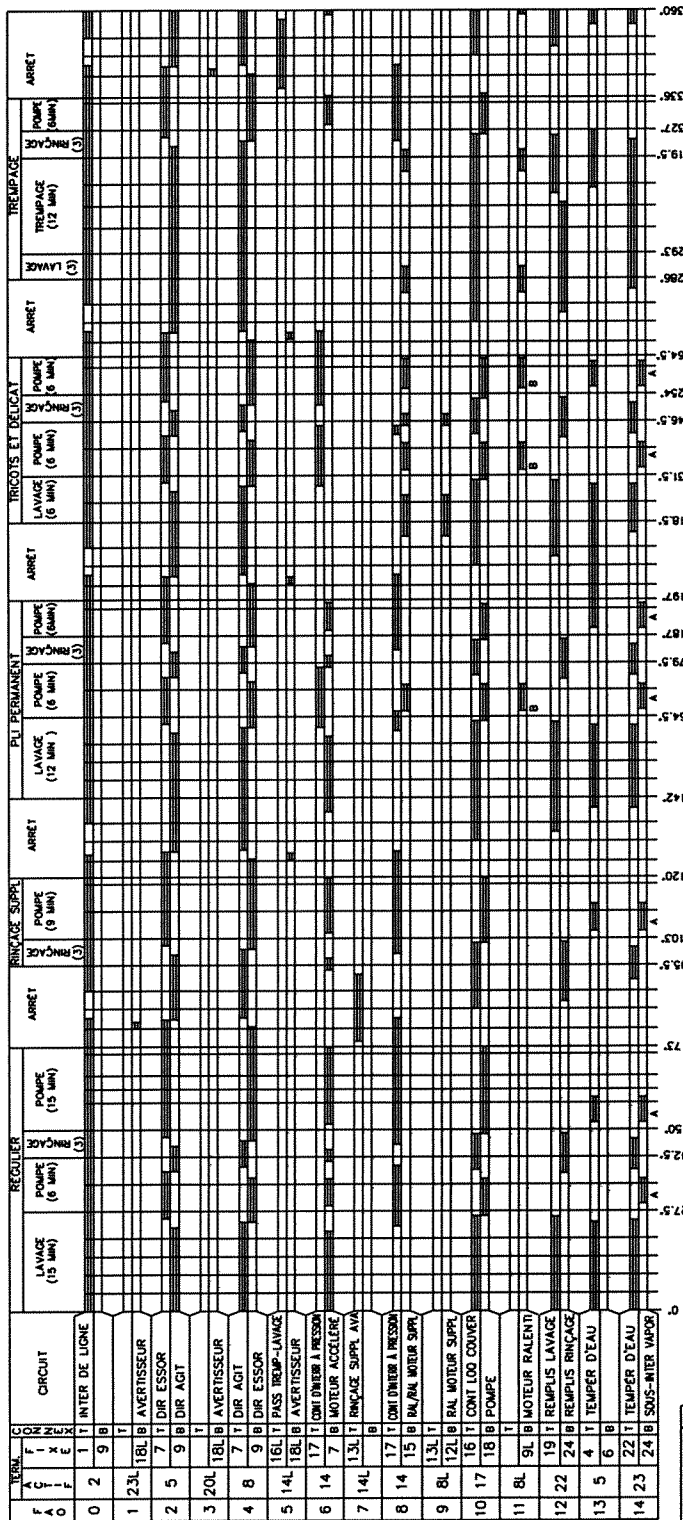

MINUTERIE DE LAVEUSE

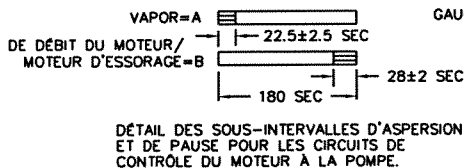

DÉTAIL DES SOUS-INTERVALLES D'ASPERSION
ET DE PAUSE POUR LES CIRCUITS DE
CONTRÔLE DU MOTEUR À LA POMPE.

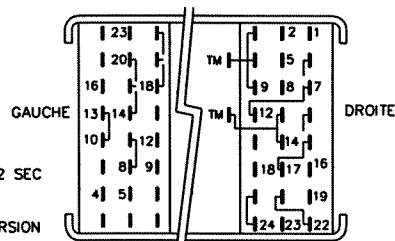

PRISE MÂLE MINUTERIE
(VUE DE L'EXTÉRIEUR)

CODES DE CÂBLAGE	
⊗	BORNE À FICHE DE MINUT
⊙	BORNE À DÉBRANCHEMENT RAPIDE
○	BORNE À VIS
+	CONNEXION
+	AUCUNE CONNEXION
⚡	INTERRUPTEUR DU MOTEUR
⚡	ÉPISSE
⚡	PROTECTEUR DU MOTEUR
⚡	MISE À LA TERRE DU BOÎTIER

COMMUTATEUR DE TEMPÉRATURE			
POSITION	LAVAGE/RINÇAGE	1-3	1-5 2-4
1	REG CHAUD/FROID	x	x
2	TIEDE/FROID	x	x
3	FROID/FROID	x	x

x=CONTACTS FERMÉS


SELECTEUR D'OPTION			
POSITION	OPTION	1-5	2-4
1	RINÇAGE SUPPL		x
2	ARRÊT	x	

x=CONTACTS FERMÉS




MISE EN GARDE: METTRE HORS
TENSION AVANT D'EFFECTUER

SCHEMA DE CÂBLAGE
134266400

CAUTION: DISCONNECT ELECTRIC
CURRENT BEFORE SERVICING

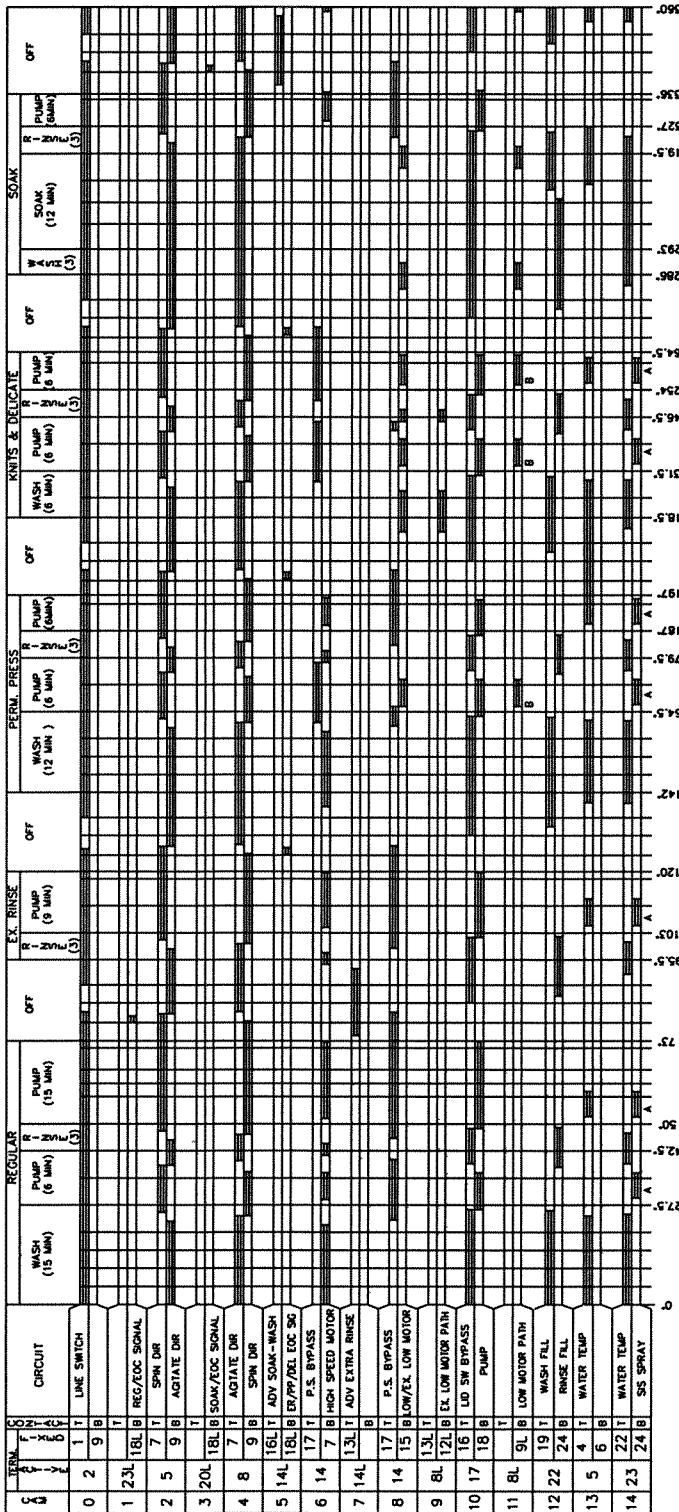

CAUTION: DISCONNECT ELECTRIC
CURRENT BEFORE SERVICING

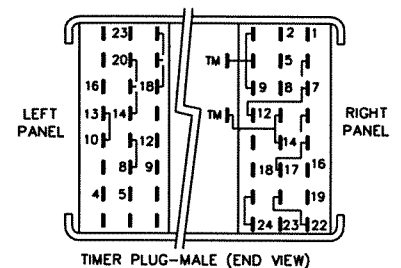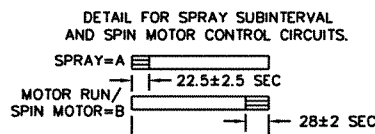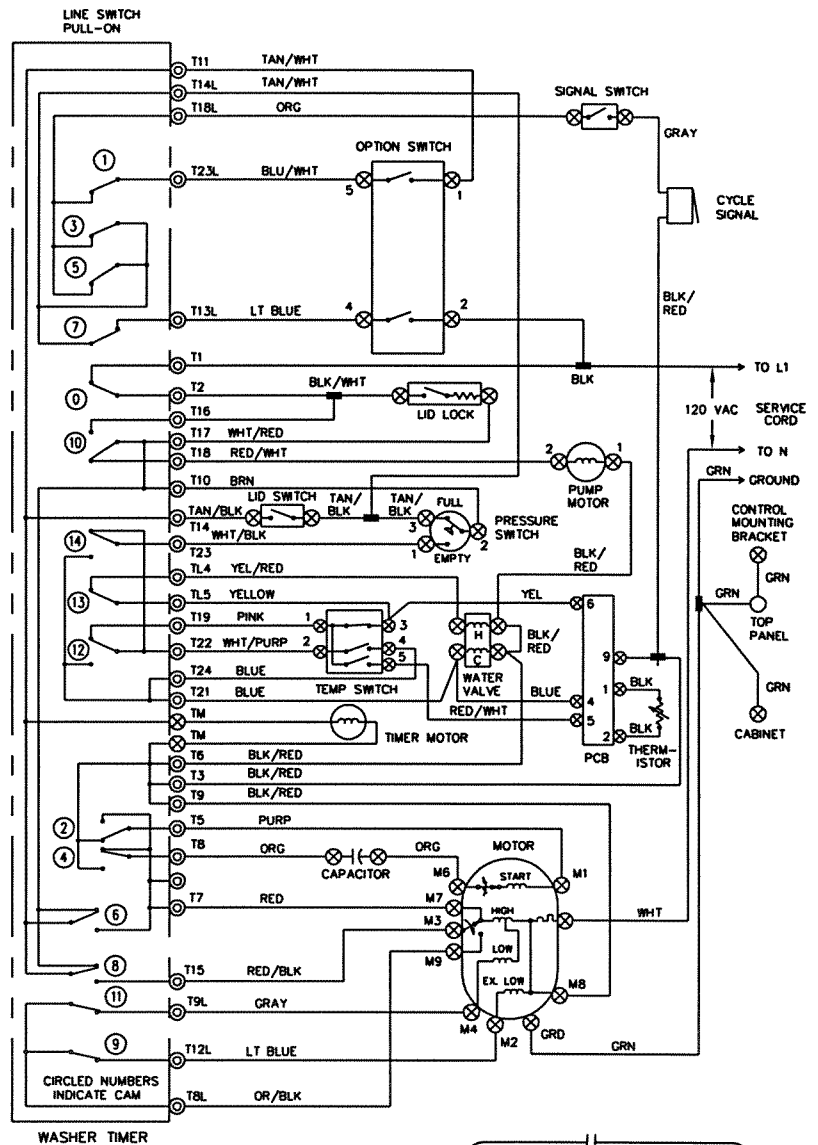

WIRING CODES				
⊙	PLUG IN TIMER TERMINAL			
⊗	QUICK DISCONNECT TERMINAL			
○	SCREW TERMINAL			
+	CONNECTION			
+	NO CONNECTION			
⚡	MOTOR SWITCH			
⚡	SPLICE			
⚡	MOTOR PROTECTOR			
⚡	CHASSIS (CABINET) GROUND			

OPTION SWITCH			
POSITION	OPTION	1-5	2-4
1	EXTRA RINSE		X
2	OFF	X	

X=CONTACTS CLOSED

TEMPERATURE SWITCH				
POSITION	WASH/RINSE	1-3	1-5	2-4
1	REG HOT/COLD	X	X	
2	WARM/COLD	X		X
3	COLD/COLD			X

X=CONTACTS CLOSED

WIRING DIAGRAM
134266400