
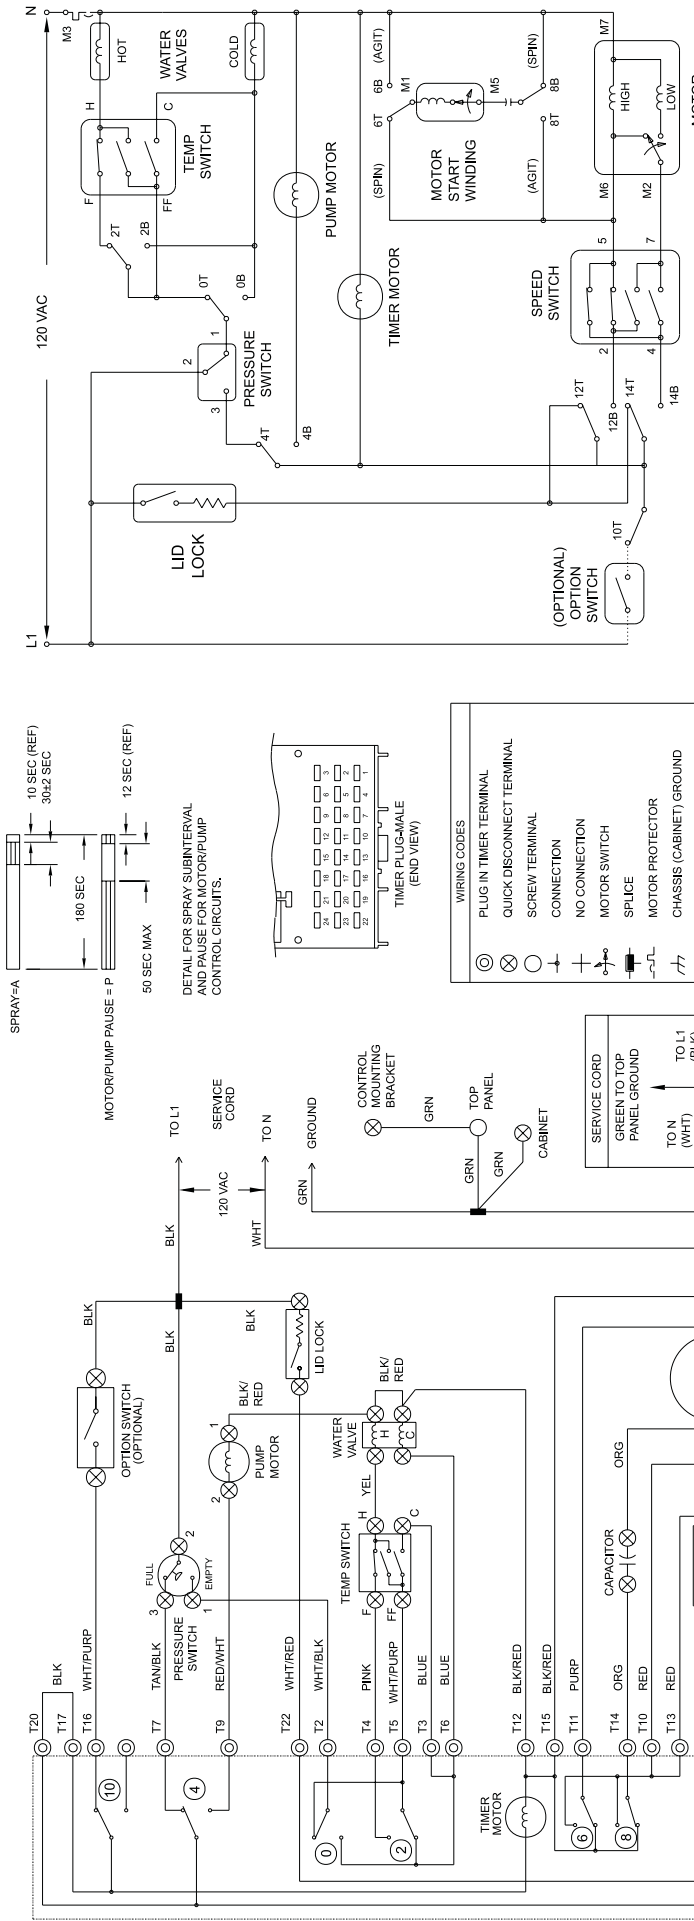


CAUTION: DISCONNECT ELECTRIC CURRENT BEFORE SERVICING

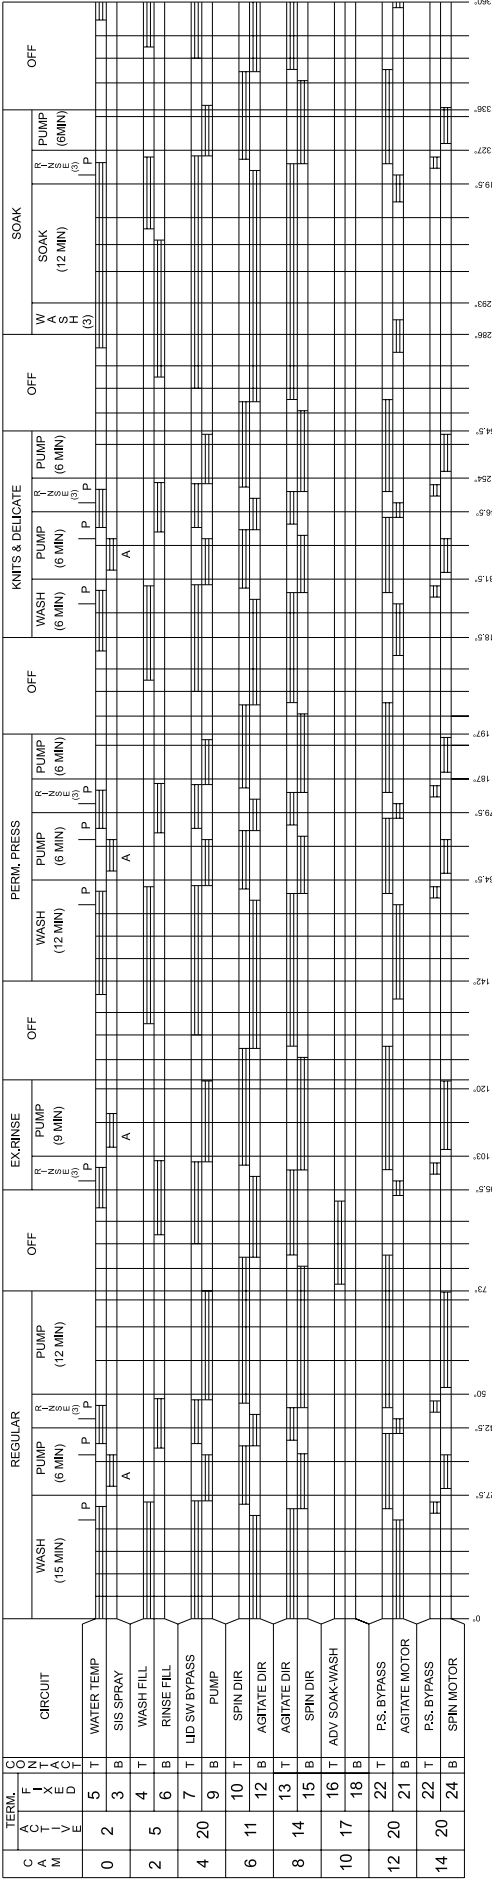

NOTE: SUFFIX INDICATES TIMER CONTACTS
T=TOP
B= BOTTOM
..... = OPTIONAL ON SOME MODELS

SPEED SWITCH CIRCUIT				
AGIT/SPIN	2-5	2-7	4-7	4-5
N/N	X	0	0	X
N/S	X	0	X	0
S/N (OPT)	0	X	0	X
S/S	0	X	X	0

TEMPERATURE SWITCH CIRCUIT				
WASH/RINSE	F-H	FF-H	FF-C	
COLD/COLD	0	0	X	
WARM/COLD	X	0	X	
HOT/COLD	X	0	0	
WARM/WARM (OPT)	0	X	X	

WIRING DIAGRAM
P/N 131980900

N=NORMAL S=LOW

0=OPEN X=CLOSED