


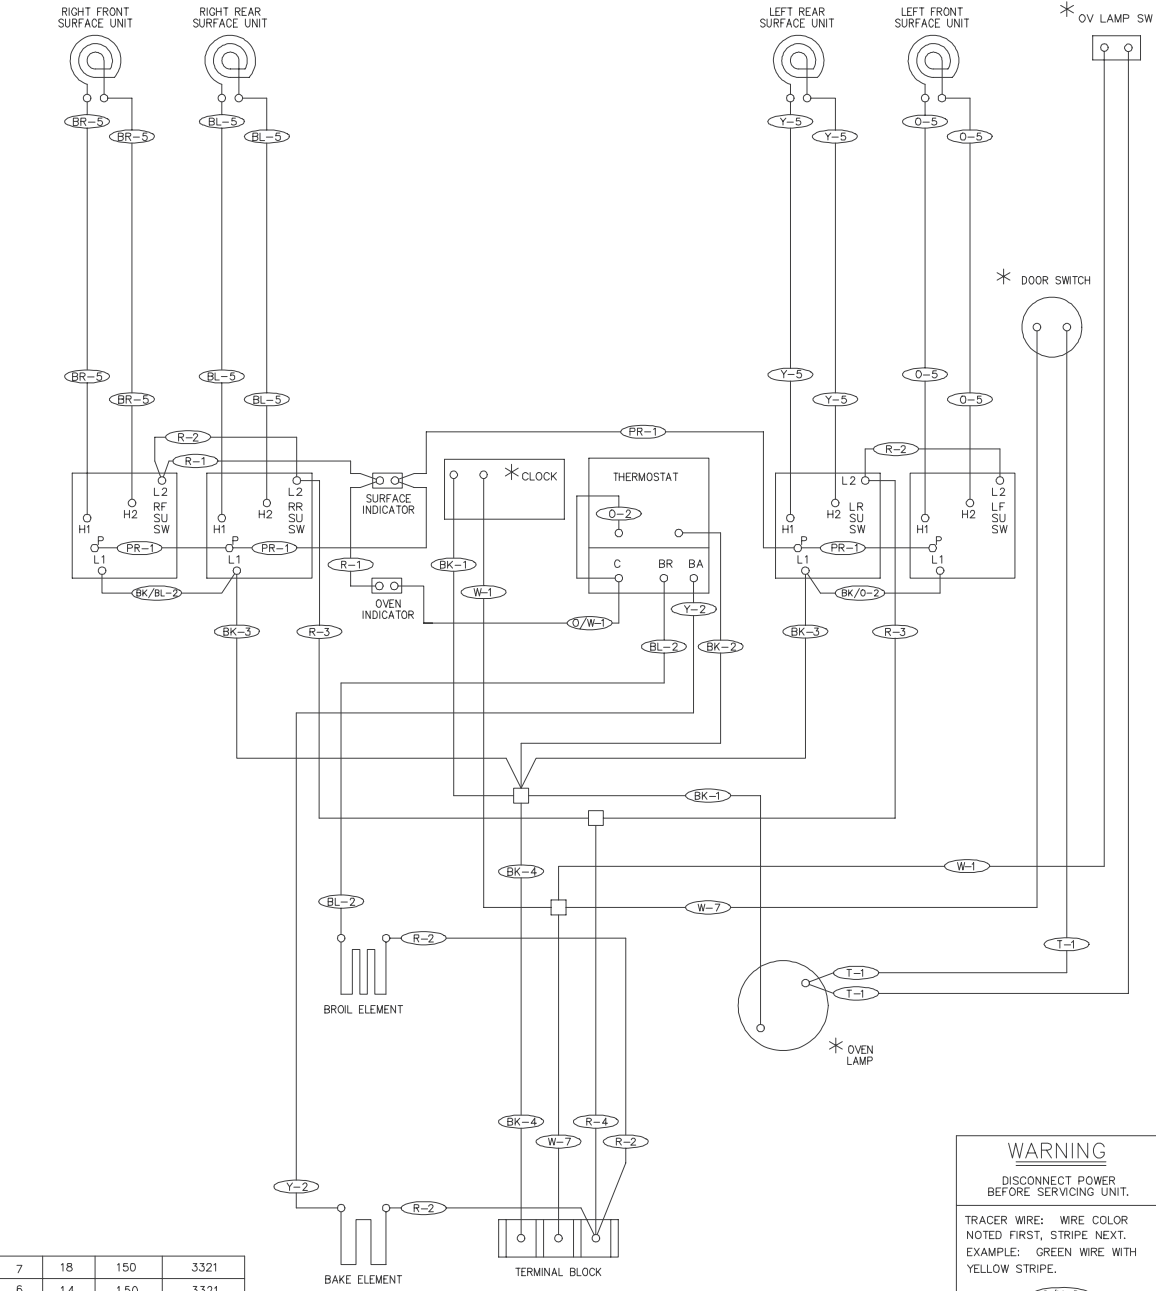


|      |     |        |          |
|------|-----|--------|----------|
| 7    | 18  | 150    | 3321     |
| 6    | 14  | 150    | 3321     |
| 5    | 16  | 150    | 3321     |
| 4    | 12  | 105    | 1015     |
| 3    | 14  | 105    | 1015     |
| 2    | 16  | 105    | 1015     |
| 1    | 20  | 105    | 1015     |
| WIRE | AWG | TEMP°C | UL STYLE |

\*THESE COMPONENTS MAY NOT  
APPEAR ON ALL MODELS.

316255169 rev. A

| WARNING                                                                                            |             |  |  |
|----------------------------------------------------------------------------------------------------|-------------|--|--|
| DISCONNECT POWER<br>BEFORE SERVICING UNIT.                                                         |             |  |  |
| TRACER WIRE: WIRE COLOR<br>NOTED FIRST, STRIPE NEXT.<br>EXAMPLE: GREEN WIRE WITH<br>YELLOW STRIPE. |             |  |  |
| G/Y-B                                                                                              |             |  |  |
| COLOR CODE                                                                                         |             |  |  |
| BK   BLACK                                                                                         | P   PINK    |  |  |
| BL   BLUE                                                                                          | PR   PURPLE |  |  |
| BR   BROWN                                                                                         | R   RED     |  |  |
| C   COPPER                                                                                         | T   TAN     |  |  |
| G   GREEN                                                                                          | V   VIOLET  |  |  |
| GY   GRAY                                                                                          | W   WHITE   |  |  |
| O   ORANGE                                                                                         | Y   YELLOW  |  |  |

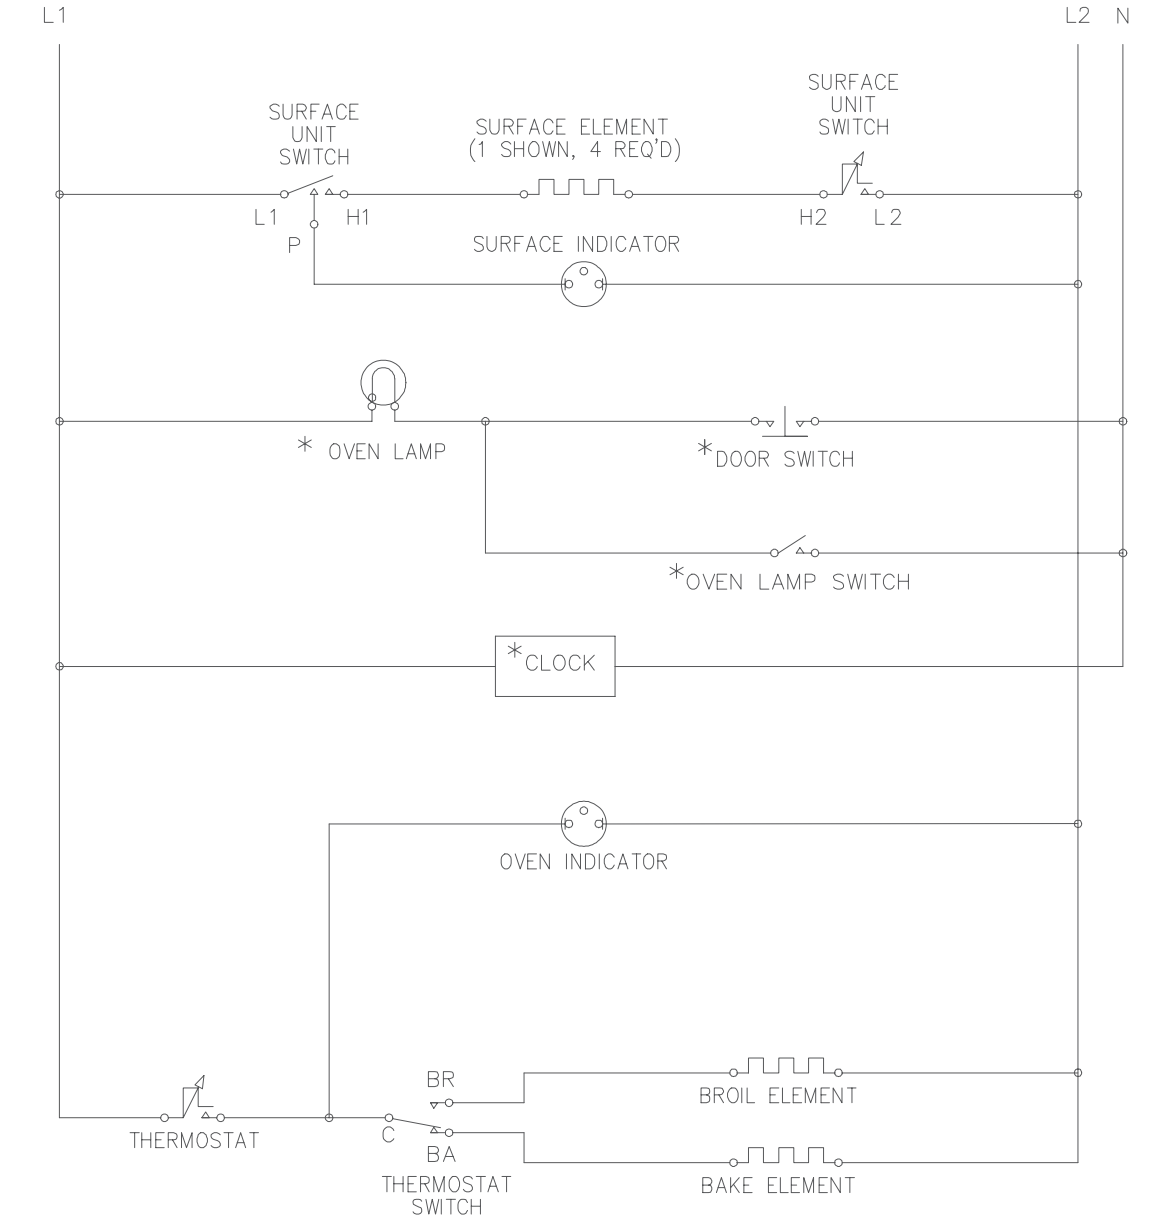

| THERMOSTAT SELECTOR SWITCH  |      |       |
|-----------------------------|------|-------|
| CONTACTS                    | BAKE | BROIL |
| C-BA                        | X    |       |
| C-BR                        |      | X     |
| X INDICATES CONTACTS CLOSED |      |       |

\*THESE COMPONENTS MAY NOT  
APPEAR ON ALL MODELS.

316255169 rev. A